

NSB-Series Stagebox

AVB Remote I/O

Owner's Manual



Table of Contents

Table of Contents	2
1. Overview	3
1.1 Introduction	3
1.2 About This Manual	3
1.3 What's in the Box	3
1.3.1 What Else You Need	4
1.4 Companion PreSonus Products	6
2. Getting Started	7
2.1 Direct connect with a StudioLive Series III mixer	7
2.2 Direct connect with a StudioLive Series III rack mixer	13
2.3 Using an NSB-series Stage Box with Two or More Mixers	16
3. Gain Compensation	28
3.1 Remote Preamp Control (Console Mixers)	28
3.2 Remote Preamp Control (Universal Control)	29
4. Hookup	32
4.1 Front-Panel Connections	32
4.2 Left-panel Connections	33
4.3 Right-panel Connections	34
4.4 Rear-Panel Connections	34
4.5 Configurable Rack Ears (NSB 32.16 only)	34
5. Technical Information	37
5.1 Specifications	37
6. Legal	40
7. Dinner is Served!	41

1. Overview

1.1 Introduction



Thank you for purchasing an NSB-series AVB-networked stage box. Designed to work seamlessly with the PreSonus StudioLive® Series III digital mixers, the NSB-series networked stage boxes provide a high-quality, expandable, networked, remote I/O solution for stage, installed sound systems, or studio recording.

PreSonus Audio Electronics is committed to constant product improvement, and we highly value our customers and their creative endeavors. We appreciate the support you have shown us by purchasing your NSB-series stage box and are confident that you will enjoy for years to come!

1.2 About This Manual

We suggest you spend some time with this manual before beginning to work with your NSB-series stage boxes, and familiarize yourself with their features, functions, and proper connection procedures. This will facilitate configuring your AVB network and make the process go as smoothly as possible.

This manual describes the functions of the NSB-series stage boxes with StudioLive Series III digital mixers. More information about AVB Networking best practices and configurations can be found in the PreSonus AVB Networking Guide, and we highly recommend that you review this document as well, to avoid any difficulty in creating your AVB network. This manual covers basic connection and use case configurations only. For more complex routing examples, please review the PreSonus AVB Networking Guide.

Throughout this manual, you will find **Power User Tips**. These suggestions provide useful information on getting the most out of your NSB stage box as well as explanations of various useful audio terminology.

Thank you, once again, for purchasing our product. We are confident that you will enjoy your new NSB stage box.


Note: When using your NSB stage box with a StudioLive Series III mixer, your mixer will require the latest firmware and Universal Control version for proper functionality. Please log into your My PreSonus user account and update all associated software for your PreSonus AVB products before proceeding.

1.3 What's in the Box


In addition to a Quick Start Guide, your NSB-series stage box package contains the following:



NSB 32.16, NSB 16.8 or NSB 8.8 AVB-networked stage box

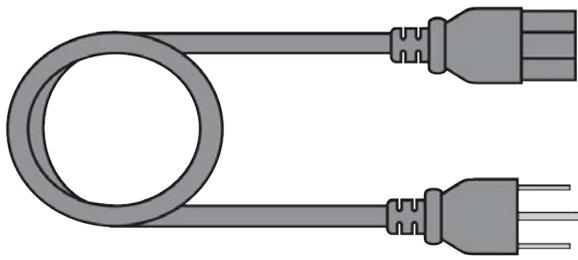


IEC Power Cord

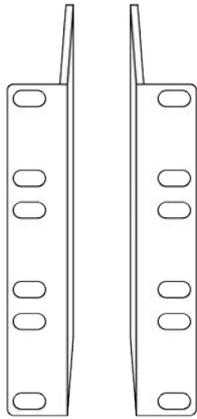


Reversible Rack Ears (NSB 32.16 only) The rack ears included with the NSB 32.16 are reversible, allowing the mixer to be racked in either recessed or reversed configurations, allowing space for all attached cabling when installing NSB 32.16 in a stage rack.


1.3.1 What Else You Need

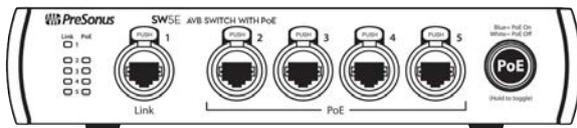


AVB Switch. The PreSonus SW5E AVB PoE Switch is fully compatible with all PreSonus AVB products and third-party AVB devices that adhere to the 1722.1 AVB standard. *For a complete list of compatible third-party AVB switches, please visit www.presonus.com.*

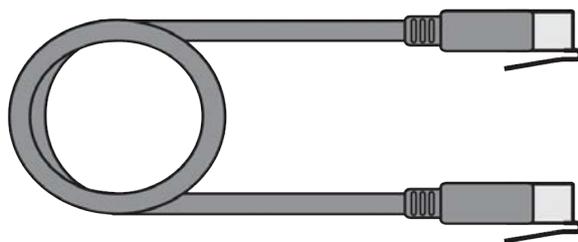

Gigabit-capable Ethernet Cable. PreSonus recommends a CAT6 or CAT6A Ethernet cable for all AVB devices. These can be acquired at most electronics dealers. We recommend cables that have been ETL or UL verified to meet ANSI/TIA 568-C.2 specification.

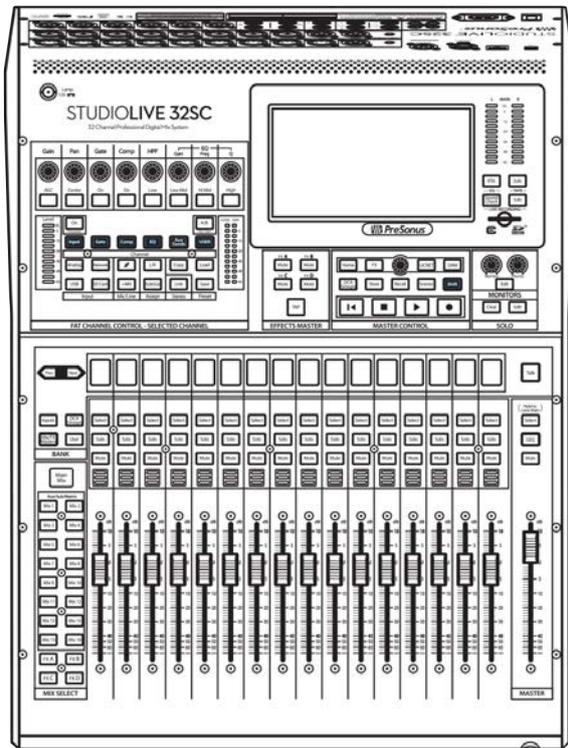

1722.1 AVB-compatible mixer. All PreSonus StudioLive Series III mixer models are fully compatible with the 1722.1 AVB standard and NSB-series stage boxes. If you are using a third-party AVB mixer, please contact the manufacturer to verify compatibility with this standard.

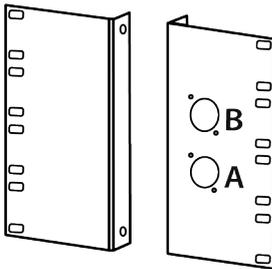


NSB 16.8 or NSB 8.8 Rack adapter. PreSonus has designed the NSB 16.8 and NSB 8.8 adapters to mount the NSB-series stage boxes in standard 19" equipment rack. This accessory is sold separately at your favorite PreSonus dealer or at www.presonus.com.

1.4 Companion PreSonus Products

Welcome to the PreSonus Ecosystem! As a solutions company, we believe the best way to take care of our customers (that's you) is to ensure that you have the best possible experience from the beginning of your signal chain to the end. In order to achieve this goal, we've prioritized seamless integration throughout every design phase of these products from day one. The result is systems that communicate with each other as intended—straight out of the box—without excessive configuration hassle.

For more information on how our PreSonus AVB networking devices play so well with one another, please review the PreSonus AVB Networking Guide.

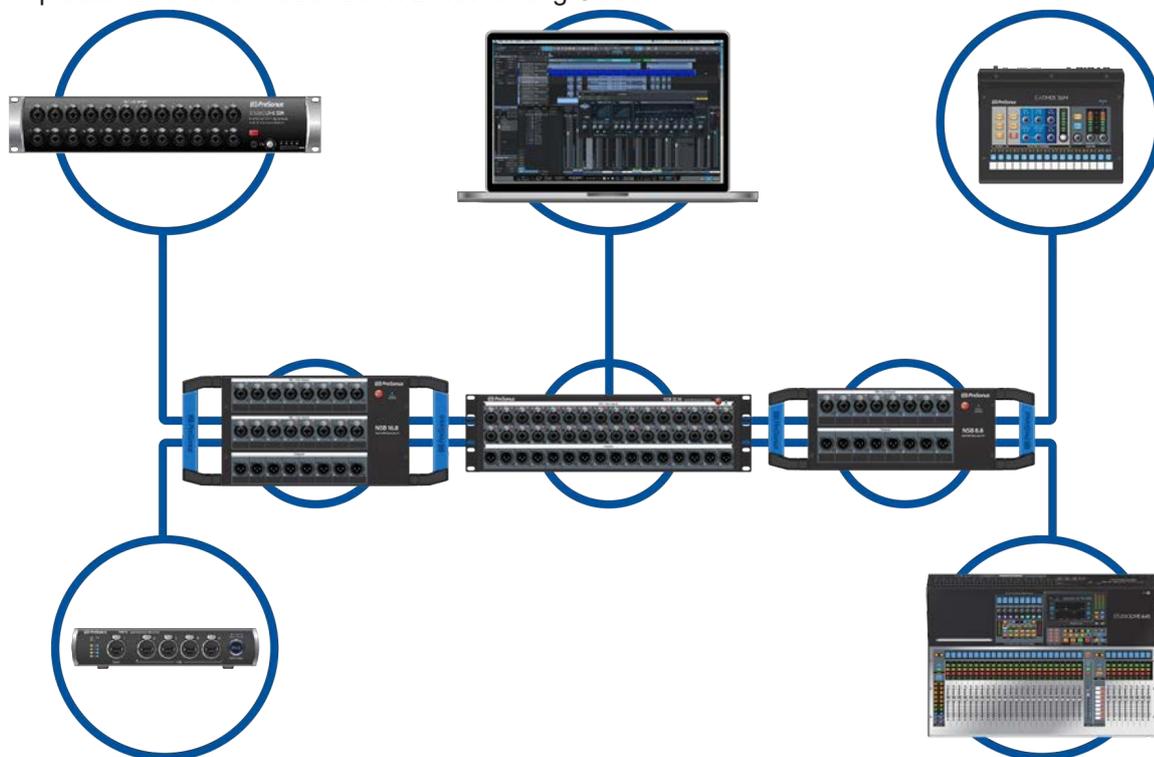

2. Getting Started

The PreSonus NSB-series stage boxes make it easy to get audio to and from the stage using an AVB network. With AVB networking, input and output signals flow through one lightweight CAT5e or CAT6 Ethernet cable. In addition, NSB-series' inputs, preamps, and phantom power can be remotely controlled from your networked StudioLive Series III console or from any device running PreSonus Universal Control touch-control software.

Before you begin, here are a few rules to get you started:


- If your mixer or your NSB-series stage box is not properly gain staged, none of your mixes will sound their best.
- Do not allow your inputs to clip. Watch the level meters; when the signal nears clipping, the top LED will illuminate, indicating that the digital-to-analog converters are in danger of being overdriven.

The following tutorials have been created for two common applications, but can be altered accordingly for your personal needs. More complex use case examples can be found in the PreSonus AVB Networking Guide.


2.1 Direct connect with a StudioLive Series III mixer

With the exception of the StudioLive 64S and StudioLive 16R, every StudioLive Series III mixer is a 32-channel mixer with 16 FlexMixes regardless of its complement of onboard I/O. **In this example, we will be looking at using on NSB 16.8** to expand the I/O capability of the StudioLive 32SC console mixer, so that it has 32 inputs and 16 outputs. This process is identical if using the NSB 32.16 or NSB 16.8.


Connect your NSB 16.8 to your StudioLive 32SC as shown below and power on your equipment:

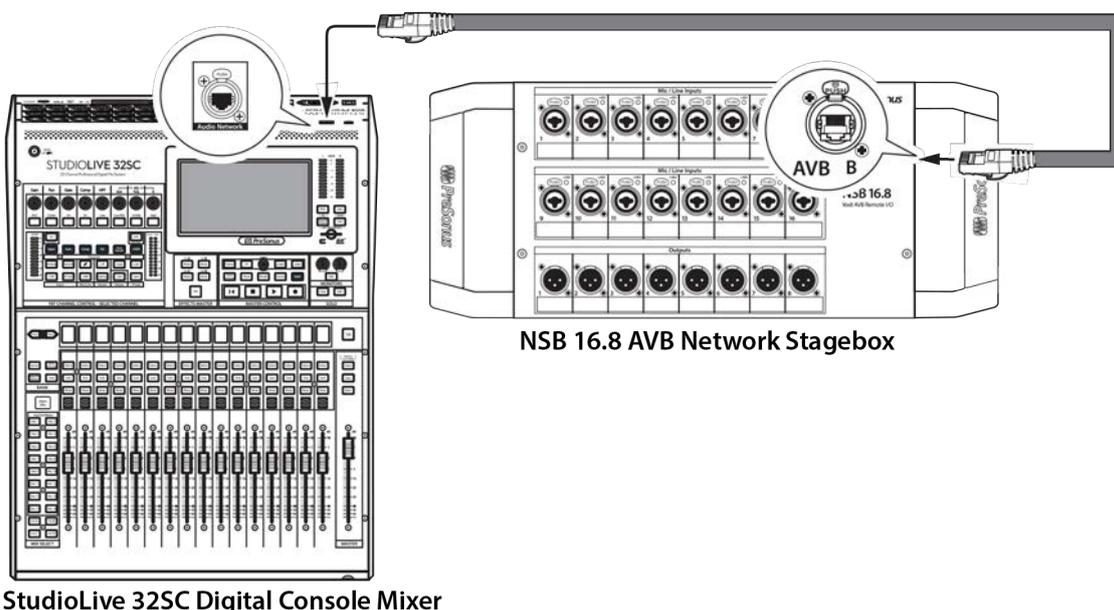


Step 1: Connect Your Stage Box to Your Mixer

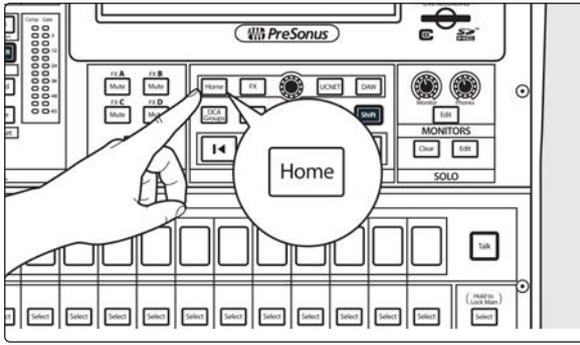


Press the Home button on your StudioLive Series III mixer.

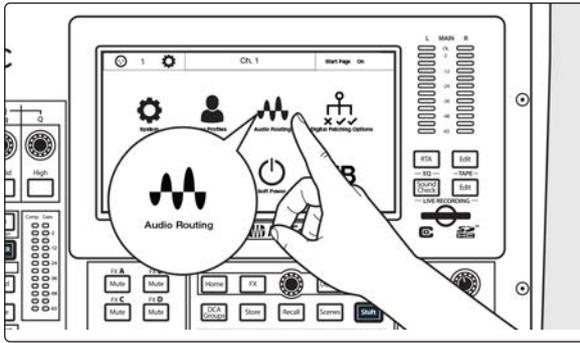


Press the Audio Routing icon on the Touchscreen.

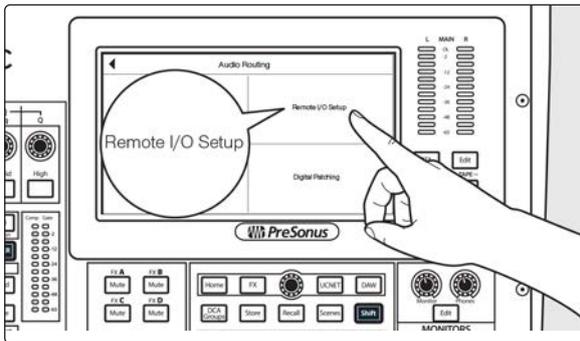


Press the Remote I/O Setup button on the Touchscreen.

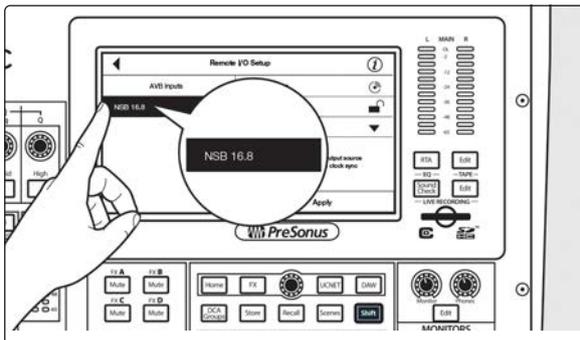

Select the NSB 16.8 from the list on the left.

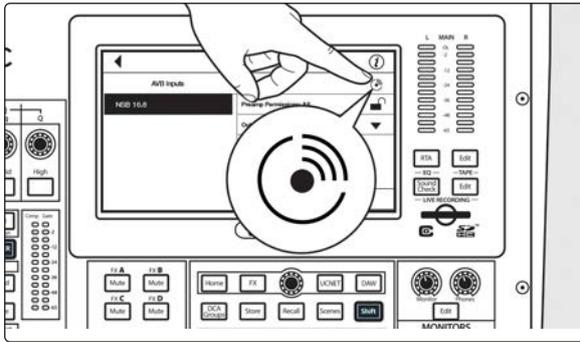


In applications where you are using multiple NSB-series stage boxes of the same model, you can press the Identify button. This will flash the Power Network LED on the front of the selected NSB stage box from green to red, allowing you to quickly locate your selection.

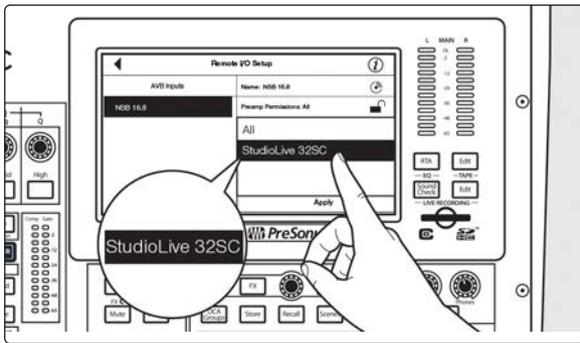


Select the mixer you'd like to use to control the preamps on your NSB stage box. By default, this is set to "All", enabling any StudioLive Series III mixer on the AVB network to control the preamps on your stage box.

Power User Tip: Because your NSB stage box inputs are most likely routed to multiple sources on your network, PreSonus highly recommends designating one mixer to control the NSB preamps.

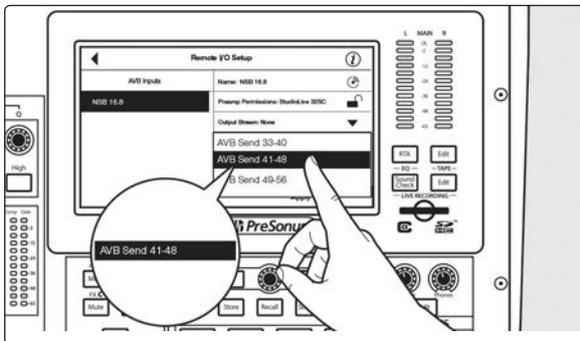


Select the AVB Output Sends you'd like returned to the physical outputs on your NSB stage box. Because the AVB streams must be routed in banks of 8, you can only source these outputs from one mixer on the network.

Note: You must assign an output stream from your mixer to your NSB-series stage box so that it is clocked properly over the network. If you do not assign an output stream from your mixer, your networked stage box will not be properly synced and you will hear audio artifacts. For more information on clocking over AVB, please review the AVB Networking Guide.

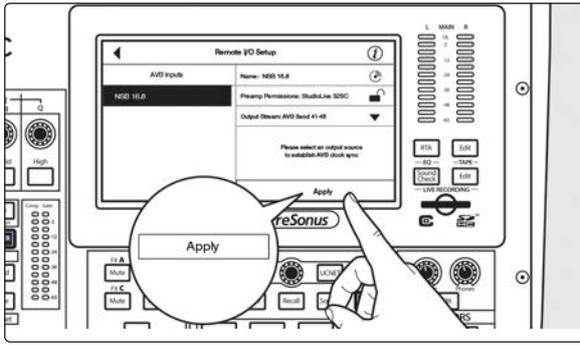

Press the Apply button when finished.

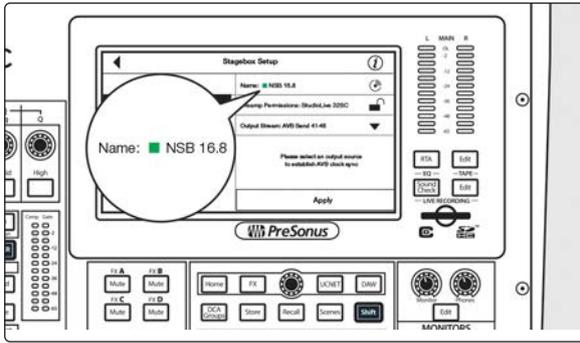


Once send streams from your mixer have been successfully patched, you will see a green status indicator next to your NSB stage box in the setup screen.




The Power Network LED on your NSB stage box will turn from green to blue when proper clock sync has been established with the AVB network.


Step 2: Routing Stage Box Inputs to Mixer

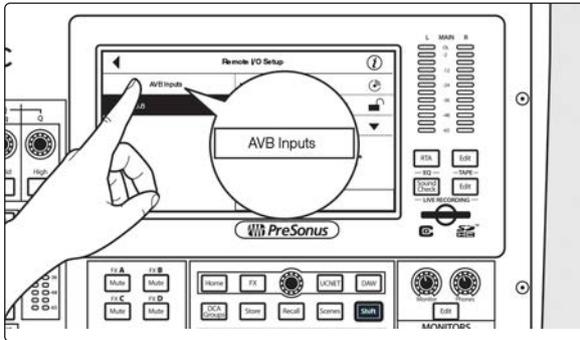


In our example, we are using the NSB 16.8 to add 16 additional analog inputs and 8 additional analog outputs to a StudioLive 32SC. Press the AVB Inputs button.

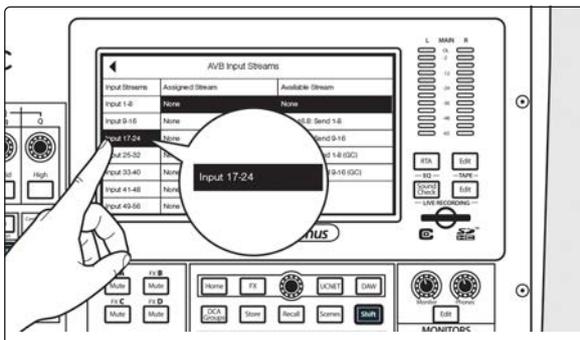


Select Inputs 17-24 from the Input Streams list.

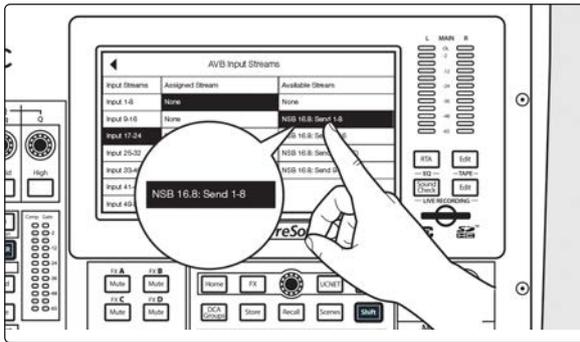

Select NSB 16.8: Send 1-8 from the Available Stream list to patch the first eight NSB inputs to channels 17-24 on your mixer.

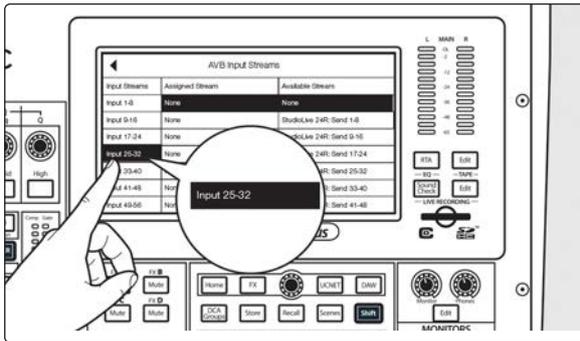

Select Inputs 25-32 from the Input Streams list.

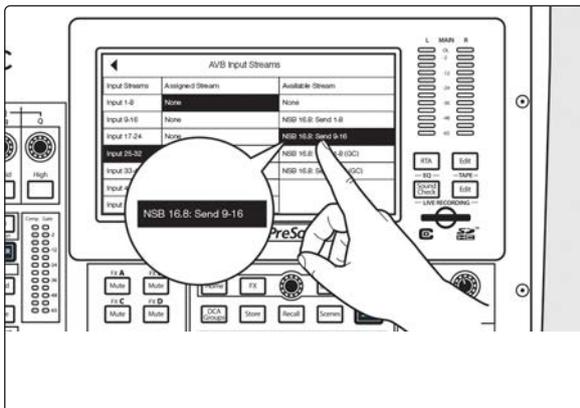


Select NSB 16.8: Send 9-16 from the Available Stream list to patch the second eight NSB inputs to channels 25-32 on your mixer.


Note: NSB stage boxes have two sets of streams: one with Gain Compensation and one without. In our example, the StudioLive 16 has total preamp control over the NSB stage box and is the only mixer connect to its streams. Because of this, Gain Compensation is not required in this example. Please review [the Gain Compensation topic](#) for more information on Gain Compensation and when it is advantageous or even required.

Step 3: Engaged Network Sources


Press the back arrow twice to return to the Audio Routing screen.

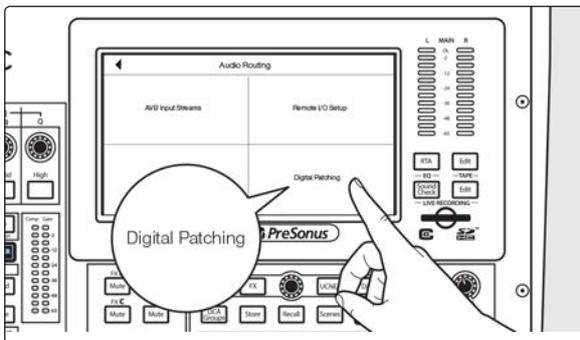

Press Digital Patching.

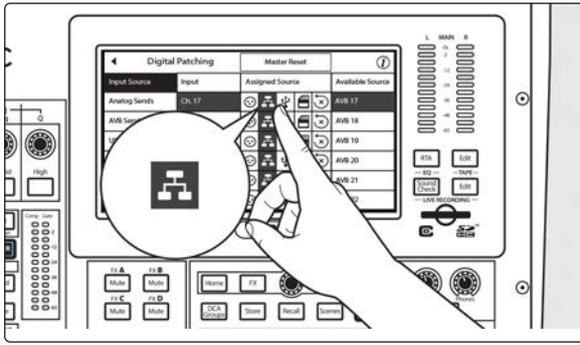

Select Input Source and scroll to Inputs 17-32. Assign each to the Network source by pressing the Network button next to each Input. Or....

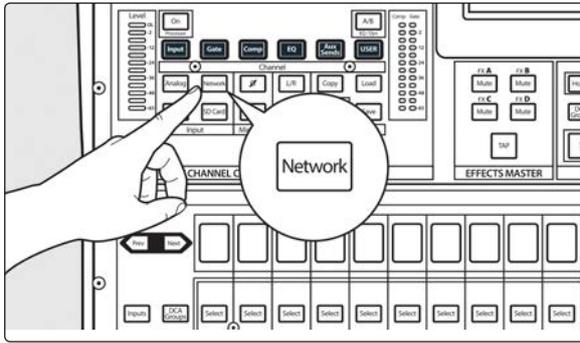


Select each channel and press the Network button from the Input source section in the Fat Channel. **Your NSB 16.8 is now ready to use!**

2.2 Direct connect with a StudioLive Series III rack mixer

In this example, we will be looking at using **one NSB 8.8 to expand the I/O capability of the StudioLive 24R rack mixer**, so that it has 32 inputs and 16 outputs. Note that the workflow below is identical for NSB 32.16 and NSB 16.8.

Connect your NSB 8.8 to your StudioLive 24R as shown below and power on your equipment:

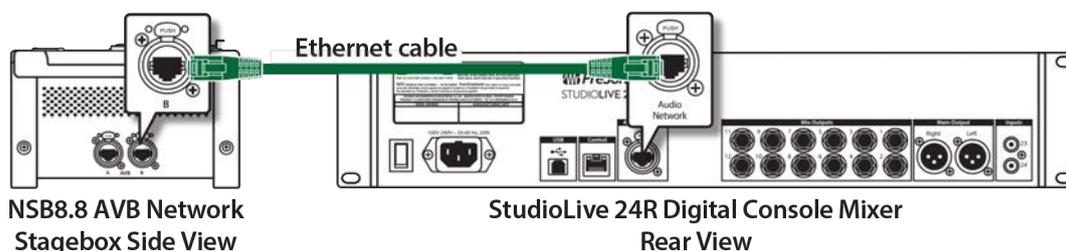


Step 1: Connect Your Stage Box to Your Mixer


1. Launch Universal Control and connect to your StudioLive 24R.



2. Click or Tap on the Settings Gear.
3. Click or Tap on the Network tab.

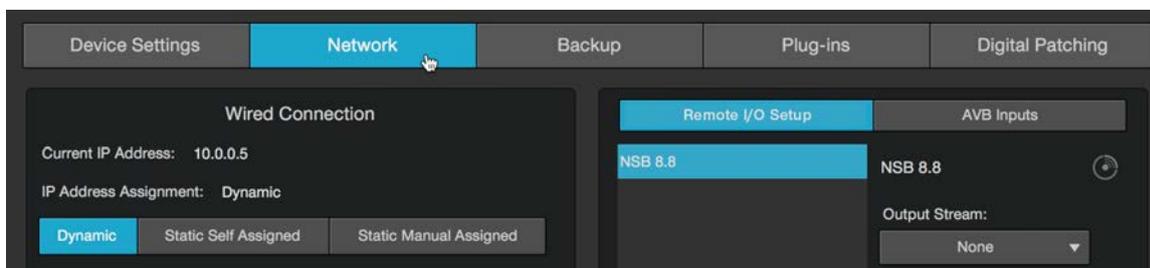

4. In the Remote I/O area, select the NSB 8.8 from the list.

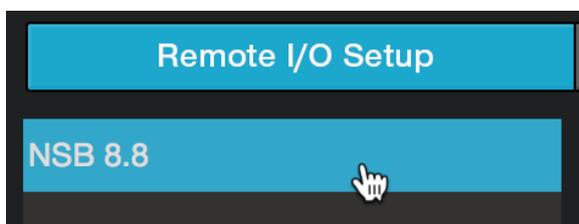


Power User Tip: In applications where you are using multiple NSB-series stage boxes of the same model, you

can press the Identify button. This will flash the Power Network LED on the front of the selected NSB stage box from green to red, allowing you to quickly locate your selection.




5. Select the mixer you'd like to use to control the preamps on your NSB stage box. By default, this is set to "All", enabling any StudioLive Series III mixer on the AVB network to control the preamps on your stage box.

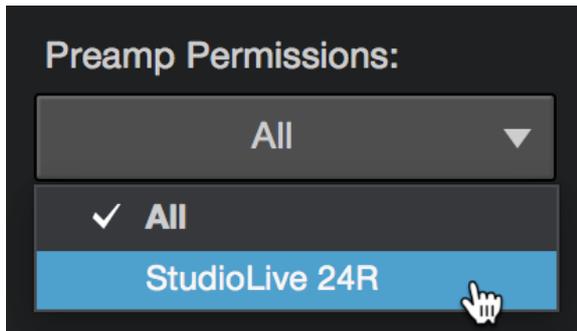

Power User Tip: Because your NSB stage box inputs are most likely routed to multiple sources on your network, PreSonus highly recommends designating one mixer to control the NSB preamps.


6. Select the AVB Output Sends from the StudioLive 24R you'd like returned to the physical outputs on your NSB stage box. Because the AVB streams are routed must be routed in banks of 8, you can only source these outputs from one mixer on the network.

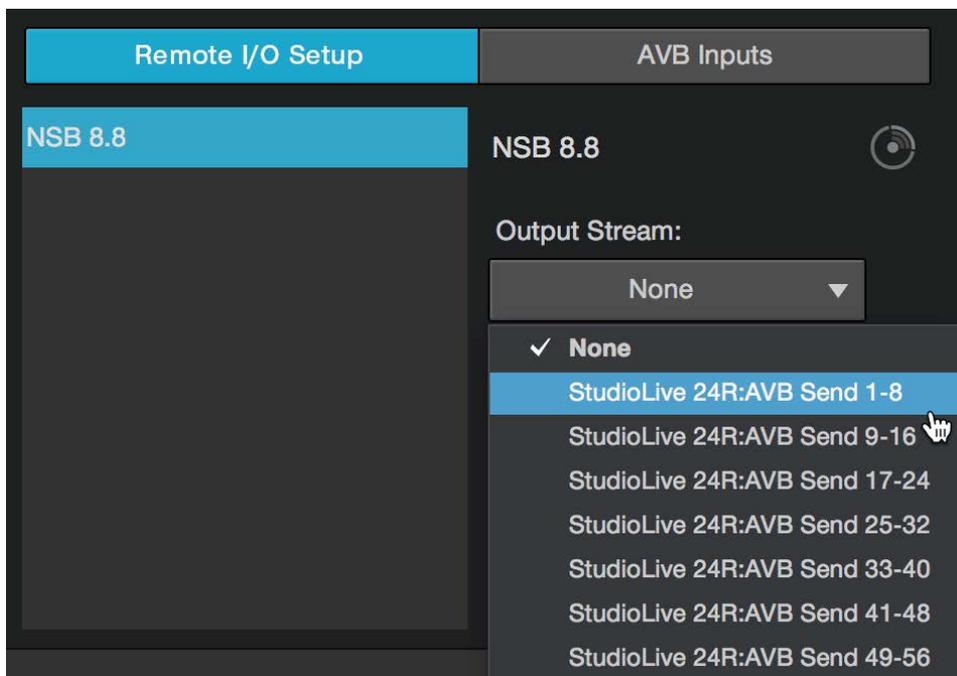

Note: You must assign an output stream from your mixer to your NSB-series stage box so that it is clocked properly over the network. If you do not assign an output stream from your mixer, your networked

stage box will not be properly synced and you will hear audio artifacts. For more information on clocking over AVB, please review the StudioLive Series III AVB Networking Guide.

7. Press the Apply button when finished.

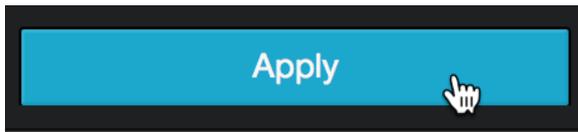

The Power Network LED on your NSB stage box will turn from green to blue when proper clock sync has been established with the AVB network.


Step 2: Routing Stage Box Inputs to Mixer

In our example, we are using the NSB 8.8 to add 8 additional analog inputs and 8 additional analog output to a StudioLive 24R. The workflow for the NSB 16.8 or NSB 32.16 will be identical.

1. Click on the AVB Inputs tab.



2. Next to Inputs 25-32, select NSB 8.8: Send 1-8 from the Available Stream drop-down menu. This will patch the eight inputs on your NSB 8.8 to channels 25-32 on your StudioLive 24R.

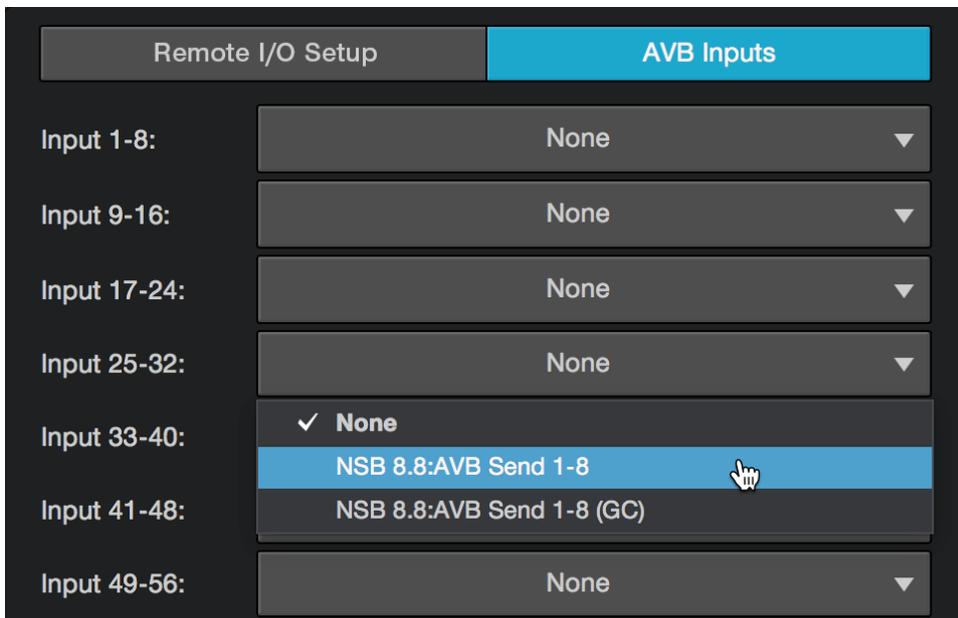


Power User Tip: NSB stage boxes have two sets of streams: one with Gain Compensation and one without. In our example, the StudioLive 24R has total preamp control over the NSB stage box and is the only mixer connect to its streams, because of this, Gain Compensation is not required in this example. Please review [the Gain](#)

[Compensation topic](#) for more information on Gain Compensation and when it is advantageous or even required.

Step 3: Engaged Network Sources

1. Click or tap on the Digital Patching tab.

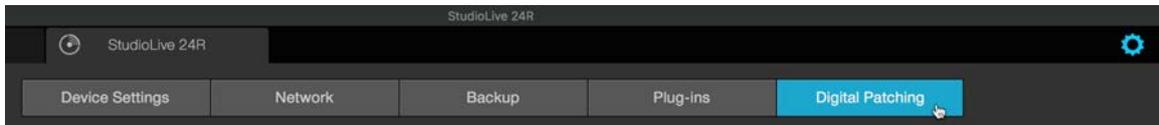

2. By default, the Input Source tab will be active. Select AVB from the Source Type selection.



3. Click or tap on the source icon for Channels 25-32 to change each channel's source input to AVB. This will enable the corresponding NSB stage box input to each channel (e.g. NSB Input 1 will be enabled on StudioLive 24R channel 25, NSB Input 2 will be enabled on StudioLive 24R channel 26, etc.)





Your NSB 8.8 is now ready to use!


2.3 Using an NSB-series Stage Box with Two or More Mixers

The same stage box can be used as a source for multiple mixers on the network. This situation is common when there is a mixer at Front-of-House and another mixer at Monitor Position. In this example, we will be using an NSB 8.8 to add eight remote analog inputs to a StudioLive 32SX at front-of-house as well as to add eight additional analog inputs to a StudioLive 24R configured as a monitor mixer to provide a full 32-channel monitor mix solution.


Connect your network as shown below and power on your equipment. Because the NSB-series stage boxes have an AVB switch onboard, you can connect two different devices simultaneously to a single NSB stage box. You also have the option of using a stand-alone AVB switch, like the PreSonus SW5e. Either of the configurations below are supported.

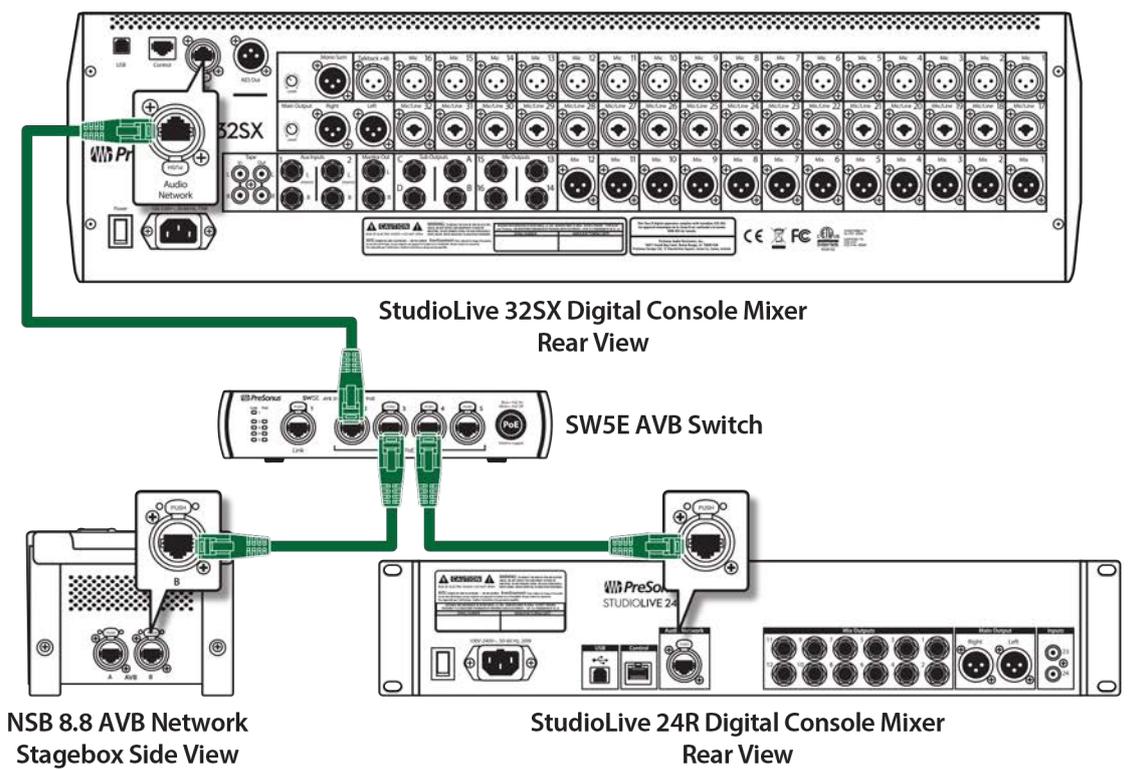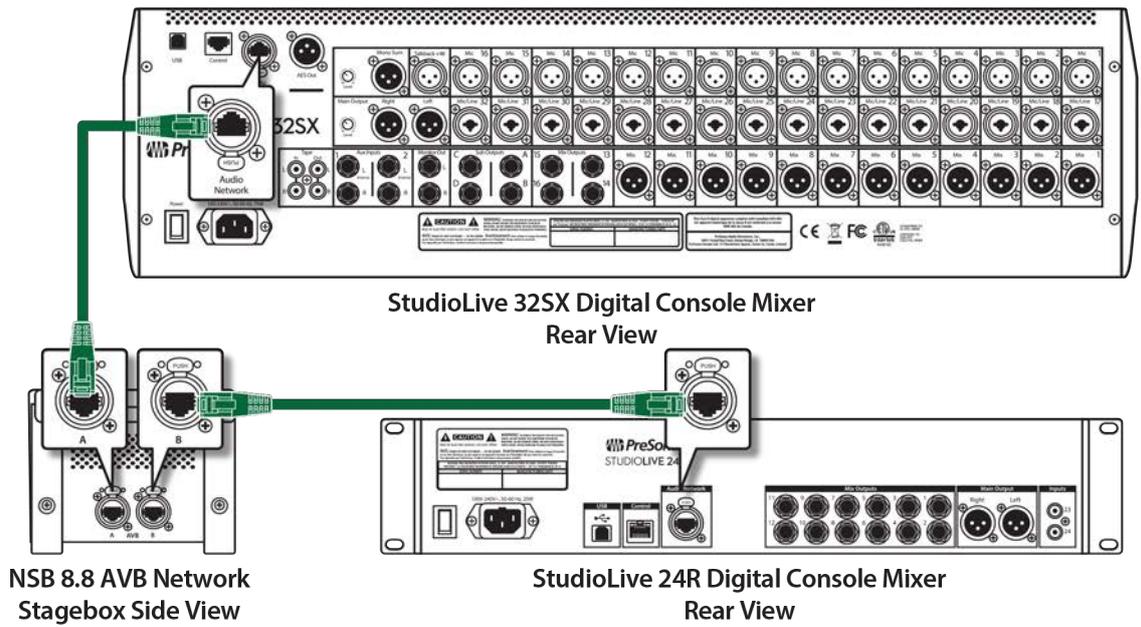


Step 1: Connect Your Rack Mixer (Monitors) to Your Console Mixer (FOH)

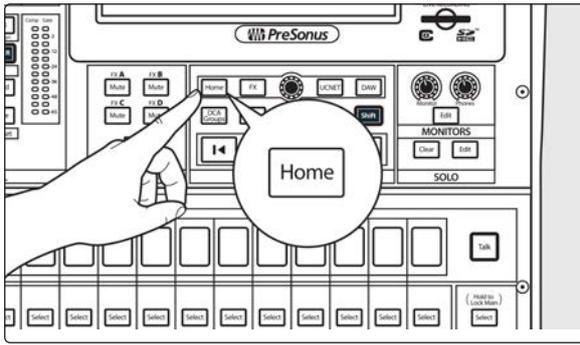


Press the Home button on your StudioLive Series III mixer.

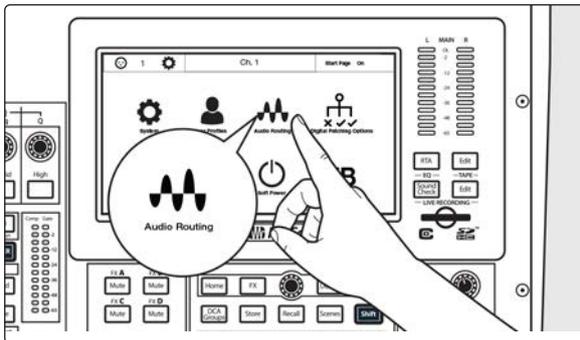


Press the Audio Routing icon on the Touch-screen.

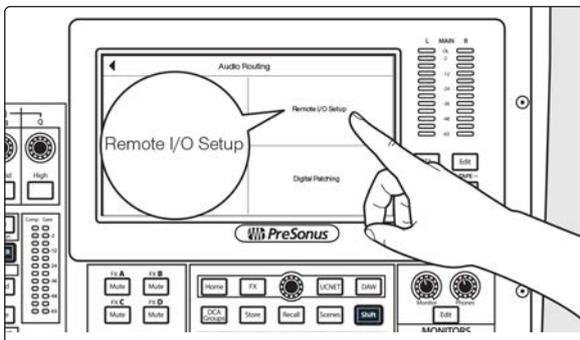


Press the Remote I/O button on the Touch-screen.

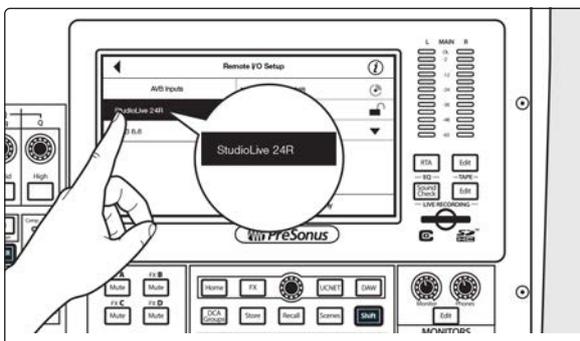

Select the StudioLive 24R.

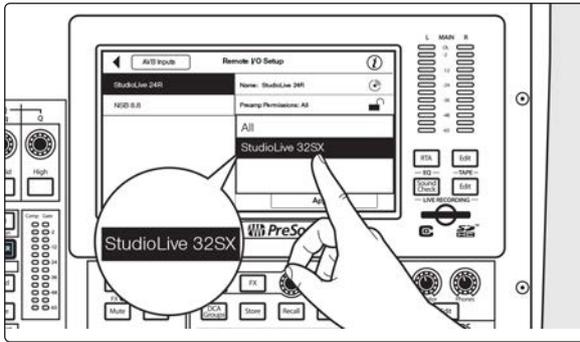


In our example, all preamps will be controlled from the Front-of-House mixer, so set the Preamp permissions to StudioLive 32SX.

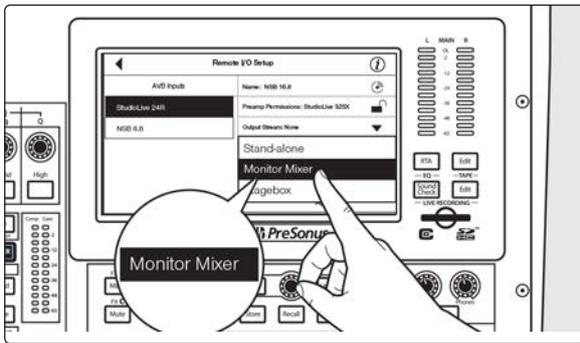


Change the Mode to Monitor Mixer.

Note: For complete information on using your rackmount StudioLive Series III mixer as a stage box or monitor mixer with your StudioLive Series III console, please review the StudioLive Series III Stagebox Mode Addendum.

Step 2: Connect Your Stage Box to Your Console Mixer (FOH)

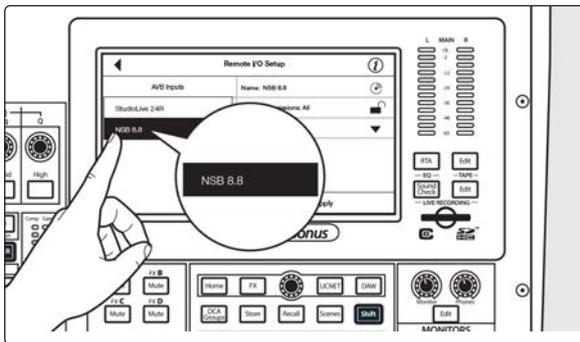


Select the NSB 8.8 from the list on the left.

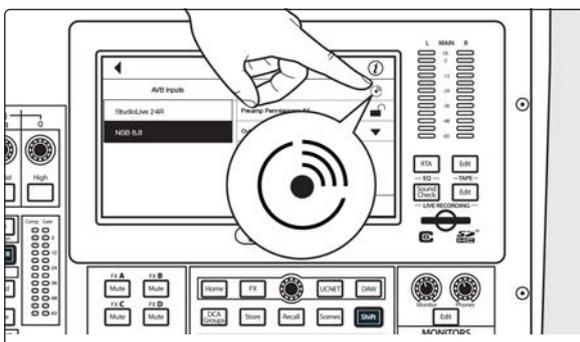

In applications where you are using multiple NSB-series stage boxes of the same model, you can press the Identify button. This will flash Power / Network LED on the top panel red and green on the currently selected NSB, allowing you to quickly locate your selection.

Step 3: Set Preamp Permissions

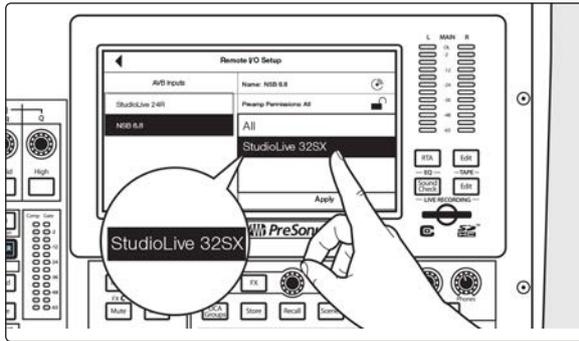

The preamps on NSB-series stage boxes can be controlled from any StudioLive Series III mixer on the network. When you have a stage box feeding more than one mixer, it is recommended that you give only one mixer permission to adjust the NSB preamp levels. In our example, we will be giving permission to the StudioLive 32SX at Front-of-House.

Step 4: Patch Outputs

The NSB-series stage box is equipped with 8 outputs to feed floor monitors, mains, or personal monitoring systems. In our example, we will be using these outputs exclusively for floor monitors and since we have a StudioLive 24R dedicated as a monitor mixer, we will be using its AVB Sends to feed the NSB 8.8 outputs.

Note: Because the AVB streams are routed must be routed in banks of 8, you can only source these outputs from one mixer on the network.

Send and Return connections over the network to and from the NSB-series stage box must be made from each mixer individually. For console mixers, this routing can be made locally, using the LCD, or remotely from Universal Control. All audio routing for rack mixers must be done remotely using Universal Control.

Note: You must assign an output stream from your mixer to your NSB-series stage box so that it is clocked properly over the network. If you do not assign an output stream from your mixer, your networked stage box will not be properly synced and you will hear audio artifacts. For more information on clocking over AVB, please review the AVB Networking Guide.

In our example, we will be routing the last 8 FlexMixes from the StudioLive 24R to the physical outputs on the NSB 8.8.


1. In Universal Control, connect to the StudioLive 24R.




2. Click or tap on the Settings Icon.




3. Click or tap on the Network Tab.




4. In the Remote I/O area, select the NSB 8.8.

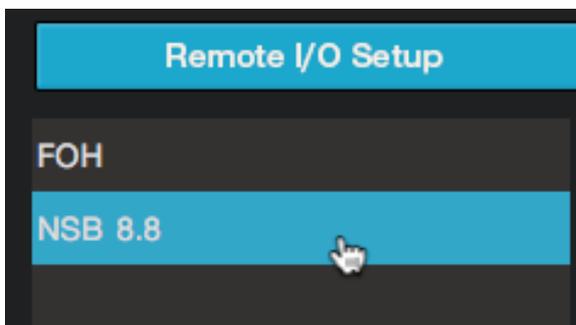

5. From the drop-down menu, select StudioLive 24R Sends 49-56.

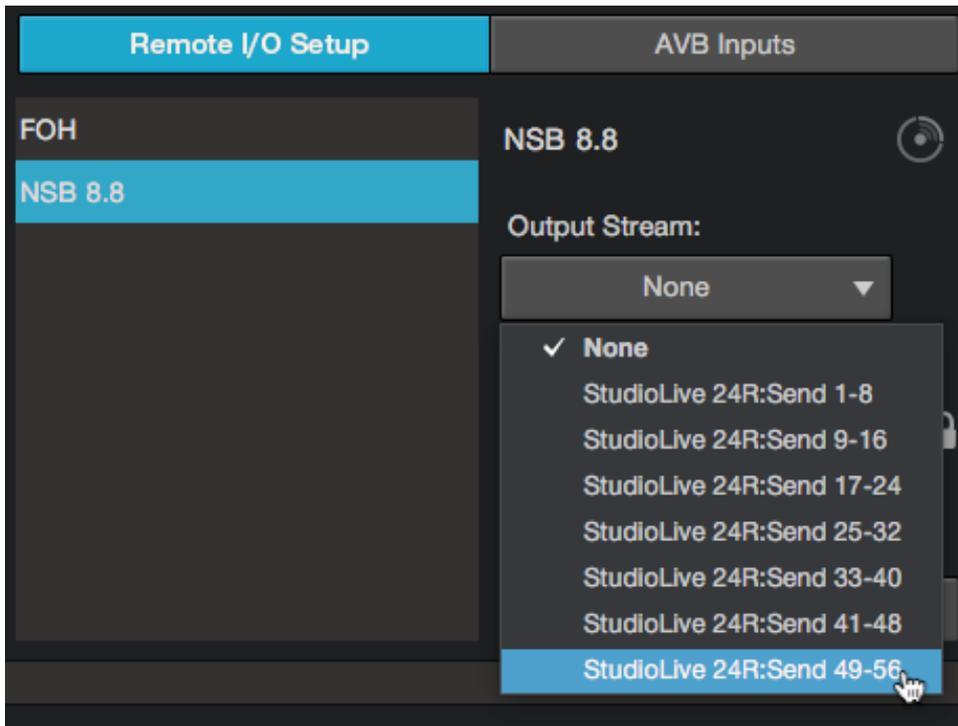


6. Press the Apply button when finished.

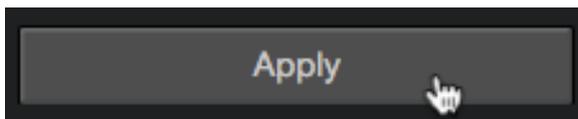


Step 5: Routing inputs to your console mixer


In our example, we are using the NSB 8.8 to add 8 remote inputs to the StudioLive 32S. We will also be routing the audio from the LCD on the console.

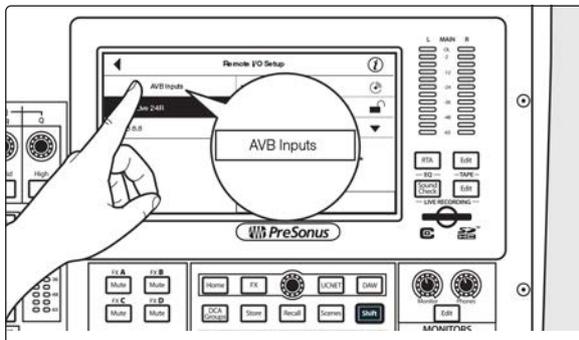

On the Remote I/O screen, press AVB Inputs.

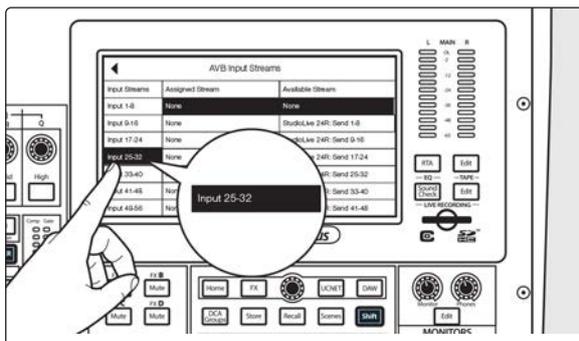


Select Input 25-32.

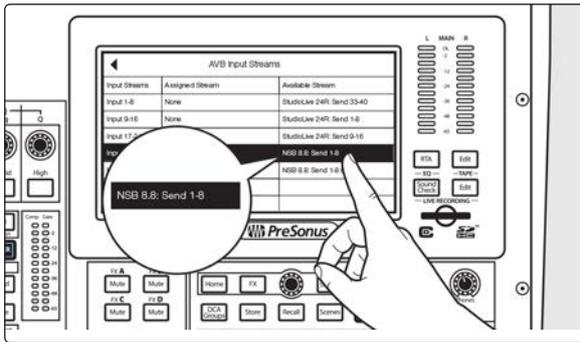


From the Available Stream list, use the Value encoder to scroll to NSB 8.8 Send 1-8.

In our example, we will also be using routing inputs 9-24 on the StudioLive 24R as part of our mix on the StudioLive 32SX. Let's go ahead and route those now.

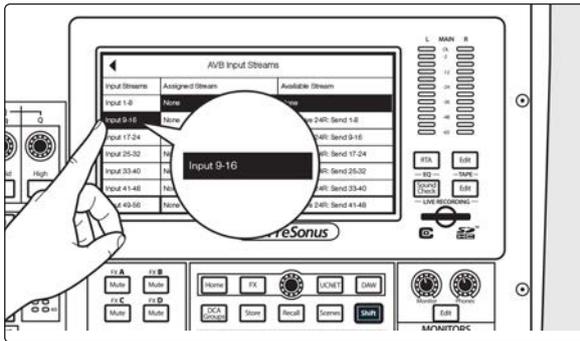

Select Input 9-16.

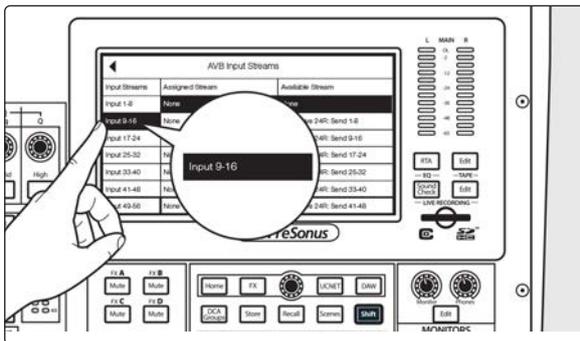


From the Available Streams list, use the Value encoder to scroll to StudioLive 24R: Send 9-16.

Repeat Steps 2-5 with Inputs 17-24 and StudioLive 24R Sends 17-24.


Your StudioLive 32SX is now configured as follows:

- Channels 1-8: No network source available.
- Channels 9-16: Network sourced from StudioLive 24R Inputs 9-16.
- Channels 17-24: Network sourced from StudioLive 24R Inputs 17-24.
- Channels 25-32: Network sourced from NSB 8.8 Inputs 1-8.


Step 6: Engaging the Network Sources on your Console Mixer

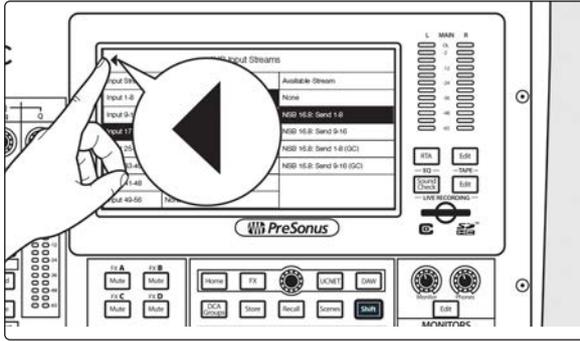


Press the back arrow to return to the Audio Routing screen.

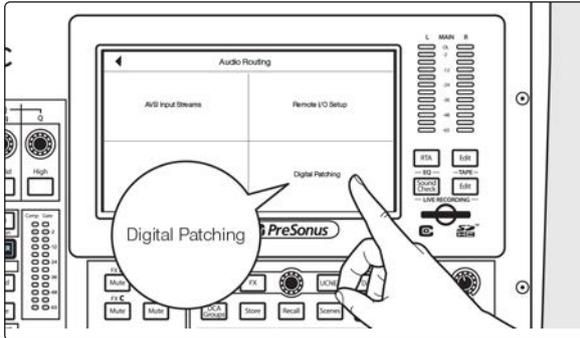

Press the Digital Patching button to open the Digital Patching screen.

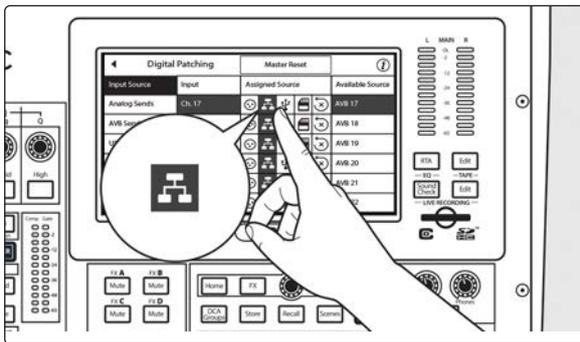

Scroll to Inputs 9-32 and assign each to the Network source by pressing the Network button next to each Input.

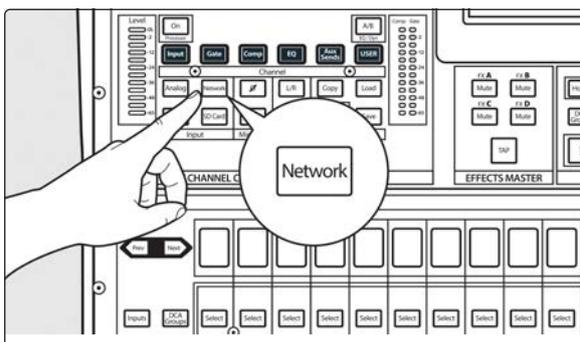

The Network Source can also be enabled for each channel individually from the Fat Channel. Using the Digital Patching screen allows you to assign the sources to multiple channels at once. Your NSB 8.8 is now ready to use with your StudioLive 32SX. Now let's set it up for the StudioLive 24R!


Step 7: Routing Inputs to your rack mixer

In our example, we are using the NSB 8.8 to also add 8 more inputs to the StudioLive 24R create a full 32-channel mixer. Let's open up Universal Control and get that routed!


1. In Universal Control connected to your StudioLive 24R, press the Settings gear.




2. Click on the Network Tab.



3. From the Remote I/O area, click on the AVB Inputs tab.

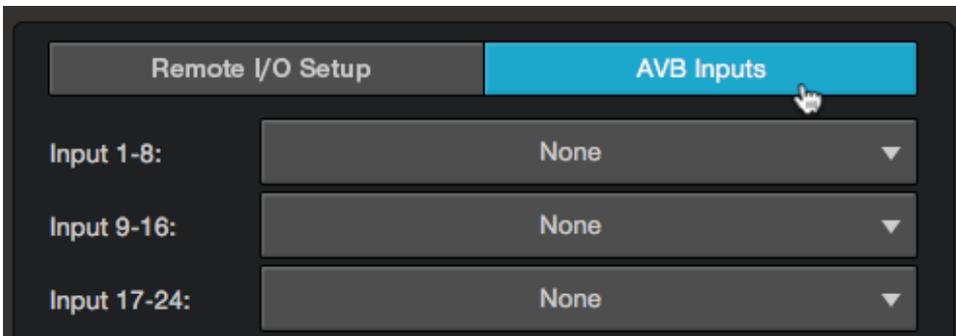


4. Click or tap on the drop-down menu for Input 25-32 and select NSB 8.8: Send 1-8 (GC). These are the gain compensated streams for your NSB 8.8. Please see Section 3 for more information on Gain Compensation.

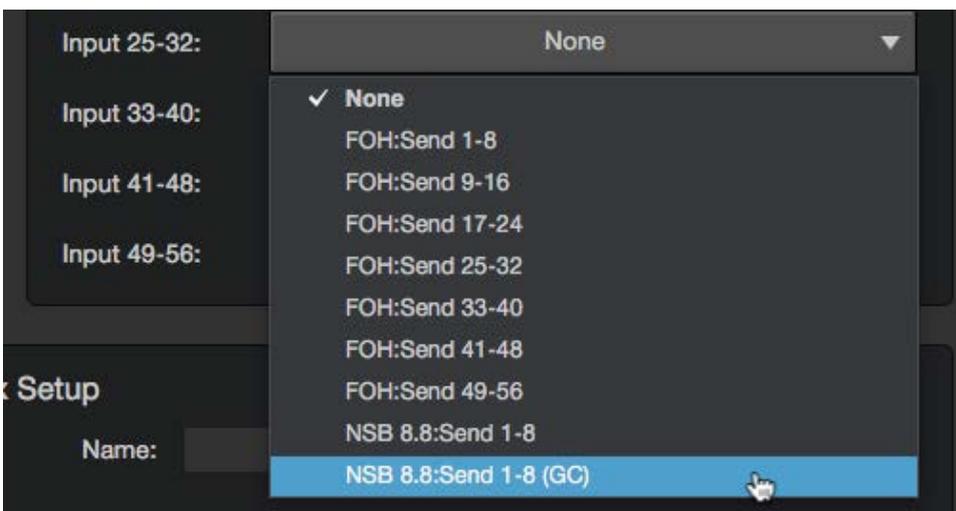

In our example, we will also be using routing inputs 1-8 on the StudioLive 32SX as part of our monitor mix. Let's go ahead and route those now.

5. Click or tap on the drop-down menu for Input 1-8 and select StudioLive 32SX: Send 1-8

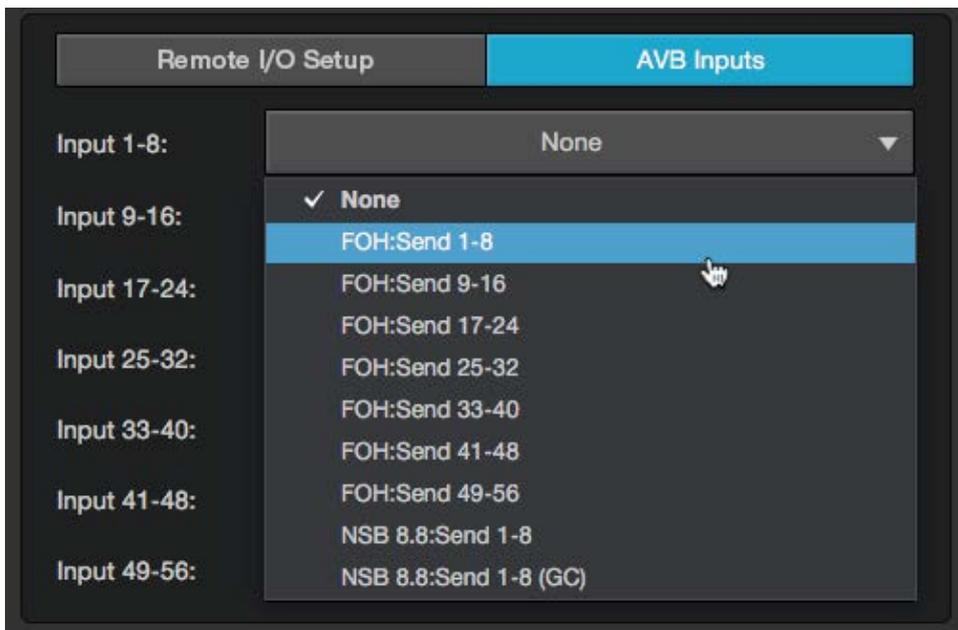


Your StudioLive 24R is now configured as follows:


- Channels 1-8: Network sourced from StudioLive 32SX Inputs 1-9
- Channels 9-16: No network source available. Local sources only (Analog or USB)
- Channels 17-24: No network source available. Local sources only (Analog or USB)
- Channels 25-32: Network sourced from NSB 8.8 Inputs 1-8.

Step 8: Engaging the Network Sources on your Rack Mixer


1. Click or tap on the Digital Patching tab.

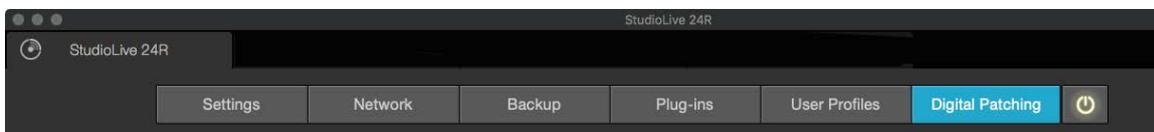


2. Click or tap on the Input Source tab.

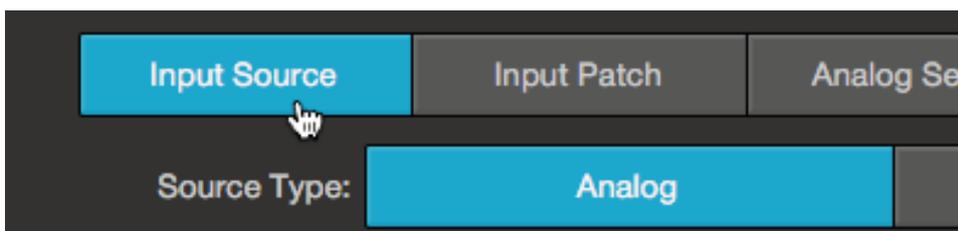

3. Click or tap on the AVB tab.

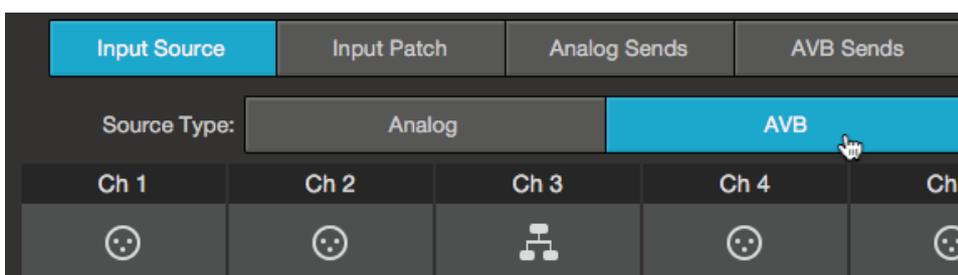

- Click or tap on the icon on Channels 1-8 and Channels 25-32. This will assign the source for each of these channels to the AVB network.

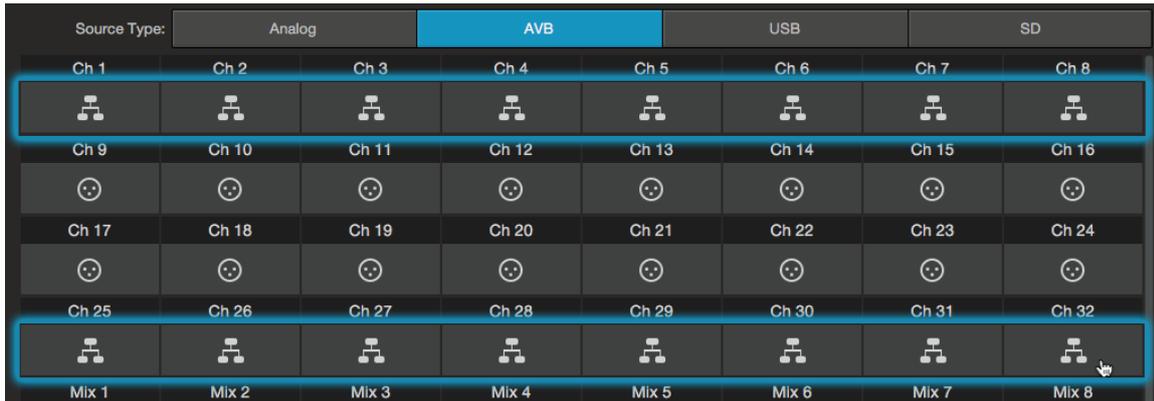


3. Gain Compensation

When your NSB-series stage box is connected to multiple mixers, you have the option to designate only one to have control over the preamps. In this way, only one engineer is in charge of gain staging on stage. Once the preamp level is set by the master mixer, every other mixer on the network has the option of listening to the same stream or the gain compensated stream.

Routing the AVB stream that isn't gain compensated means that you will have no control over the level of the streams feeding the inputs of your mixer. While this may be fine in some situations, this could create gain staging issues in others.


Using the Gain Compensated (GC) stream allows you to retain independent gain control on each mixer without potentially harming the Front-of-House mix. NSB stage boxes have an onboard DSP that adjusts the level of the gain compensated streams relative to gain set on the master mixer. In this way, every mixer on the network has a working gain range of +/- 20 dB, even if they are not the set as the master preamp controller for the stage box.

Once Gain Compensation is engaged, the Master mixer can adjust the gain of each NSB preamp +/- 15 dB before the change will be heard locally on any mixer receiving the Gain Compensated stream.

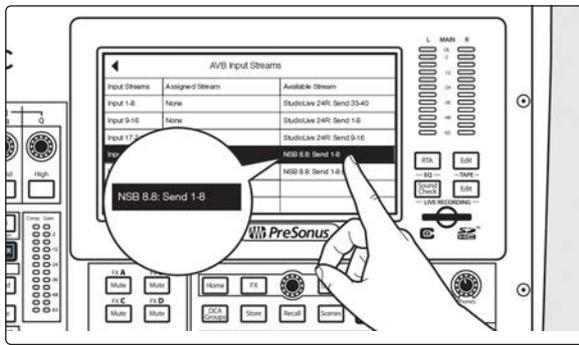


When using a StudioLive Series III console as the master preamp controller for your NSB-series stage box, select the non-Gain Compensated streams for your inputs.

3.1 Remote Preamp Control (Console Mixers)

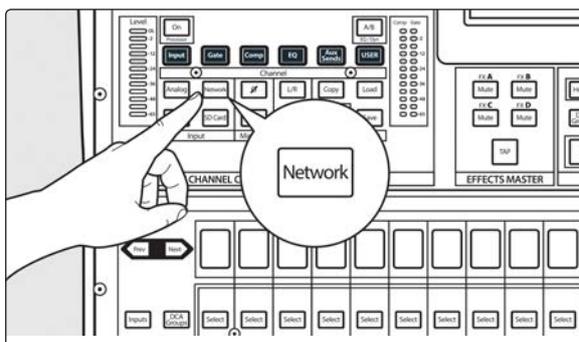


After you route the NSB inputs to your console mixer, select Network for the source on the corresponding channels.

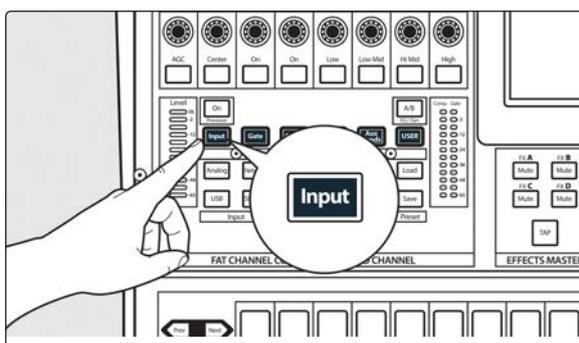

Press Input on the Fat Channel.




You can now control the preamp level and phantom power for your NSB stage box from the Fat Channel on your console, in the same way that you control the local inputs.

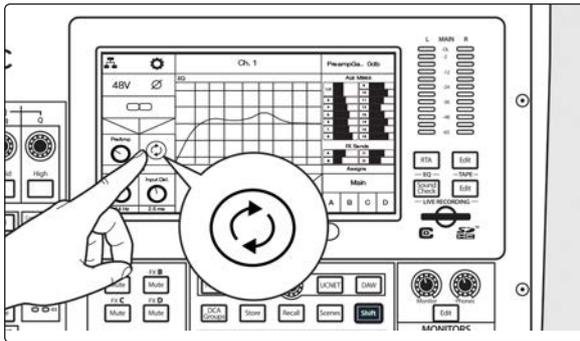

After you have set the preamp levels, enable Gain Compensation from the LCD. This will turn on Gain Compensation for that input and allow other mixers on the network to source that stream.

Note: If you do not enable Gain Compensation, making a change on the mixer with preamp control over the NSB stage box will change it for any device listening to that stream on the network.

3.2 Remote Preamp Control (Universal Control)

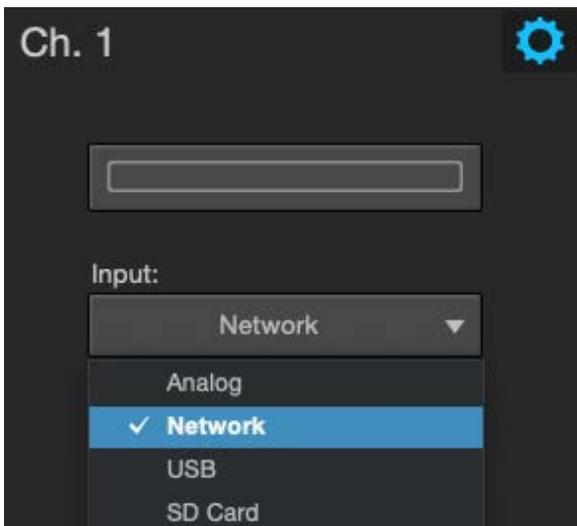

After you route the NSB inputs to your console mixer, select Network for the source on the corresponding channels.



Select the channel for which you'd like to set the gain.



You can now control the preamp level and phantom power for your NSB stage box from the Fat Channel in Universal Control, in the same way that you control the local inputs.

After you have set the preamp levels, enable Gain Compensation. This will turn on Gain Compensation for that input and allow other mixers on the network to source that stream.



Note: If you do not enable Gain Compensation, making a change on the mixer with preamp control over the NSB stage box will change it for any device listening to that stream on the network.

4. Hookup

4.1 Front-Panel Connections



Mic/Line Inputs. The inputs on your NSB-Stagebox can also accept mic- or line-level signals. These inputs use TRS-XLR combo jacks that can accept both XLR and balanced or unbalanced 1/4" cables.

The XLR inputs provide access to the onboard PreSonus XMAX microphone preamplifiers, for use with all types of microphones. The XMAX preamp features a Class A input buffer circuit, followed by a dual-servo gain stage. This results in exceptionally low noise, and a wide range of gain, allowing you to boost signals significantly, without introducing unwanted background noise.

The 1/4-inch TRS connectors bypass the gain stage and are scaled to accept line-level signals up to +18 dBFS. Use these inputs for any line-level device.

Power User Tip: *When the line inputs are engaged, the microphone preamp circuit is bypassed completely, and no trim control is available. Typical examples of line-level connections are synthesizer outputs, signal processors, and stand-alone mic preamps and channel strips. Use the output level control on your line-level device to adjust its level.*

Note: As with many audio devices, plugging a microphone or line-level device, or enabling/disabling phantom power can create a momentary noise spike in the audio output. It is highly recommended that you mute or turn down a channel's fader before changing connections or toggling phantom power on or off.



Phantom Power Indication. The NSB provides individually-switchable 48V phantom power for each microphone input. The red LED next to each input indicates whether or not Phantom Power has been enabled for the corresponding mic preamp. Whichever mixer has preamp control permissions, also controls the Phantom Power for each input.



WARNING: Phantom power is required for condenser microphones and certain other specialty microphones that contain active preamp circuitry. However, applying phantom power to mics that don't require power can damage them (especially ribbon mics). Switch phantom power off for all channels where it is not required.

XLR connector wiring for phantom power:

Pin 1 = GND Pin 2 = +48V Pin 3 = +48V



Line Out. These balanced XLR line outputs are to connect external devices like powered floor monitors, amplifiers, etc.



Mute All. This button mutes every input and output on your NSB. Use this button to quickly silence your NSB while making connections or disconnecting equipment to avoid volume spikes in your system.



Power Network. This LED displays power and network connectivity.

- **Red.** No network is available.
- **Green.** The NSB stage box is connected to an AVB network.
- **Blue.** The NSB stage box is connected to an AVB network and receiving proper word clock sync.

4.2 Left-panel Connections



AVB A. This locking Ethernet connection should be used to connect your NSB to your AVB network.



AVB B. This locking Ethernet connection can be used to connect your NSB to another NSB or other AVB device. You can also use this connection to daisy chain additional NSB stage boxes or EarMix 16M personal monitor mixers in situations where you are connecting your devices directly to your mixer without an AVB switch or if you have exhausted the available ports on your AVB switch.

Power User Tip: Please refer to the section on hop limitations on AVB networks in the PreSonus AVB Networking Guide before cascading numerous AVB devices without a central switch, like the PreSonus SW5e.

4.3 Right-panel Connections




Power. This Power input accepts power from the included IEC3 Power cord.



Power Switch. This is the on / off switch for your NSB.

4.4 Rear-Panel Connections

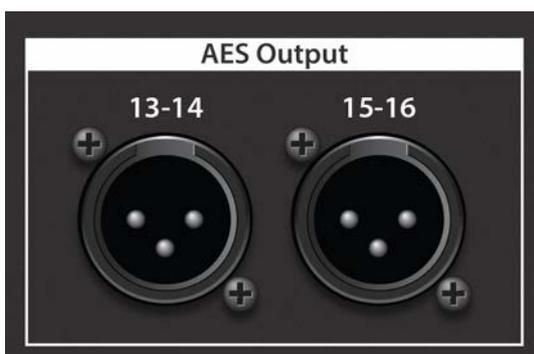

(NSB 32.16 Only) AES Out. These Digital AES-3/EBU XLR outputs are to connect external devices like power amplifiers, 2-track recorders, streaming equipment, etc.

4.5 Configurable Rack Ears (NSB 32.16 only)


Your NSB 32.16 ships with a pair of removable and reversible rack ears, allowing for a two extra mounting configurations to best suit your setup and workflow.

Mounting the rack ears in the recessed position allows you to set the NSB 32.16 farther back in a road case, allowing extra room for your cables in the front.

Mounting the rack ears in the reversed position allows you to mount the NSB 32.16 backwards in its rack, positioning the analog I/O at the rear of your case and the digital and power connectivity at the front.


To remove and relocate the rack ears:

1. Loosen and remove the six screws on each side of the NSB 32.16 using a hex driver (not included.)

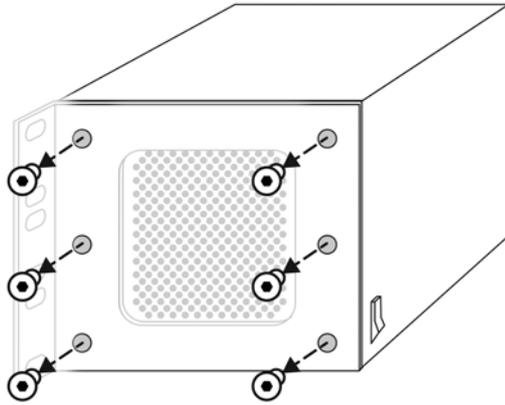


2. Re-position the ears to the desired configuration.



For a recessed configuration, attach the back end of the rack ears to the frontmost holes of the NSB 32.16.

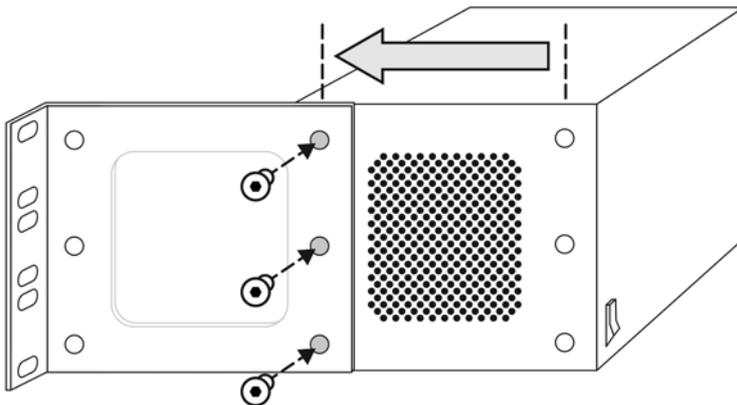

Replace the extra screws in the unused holes to avoid losing them.

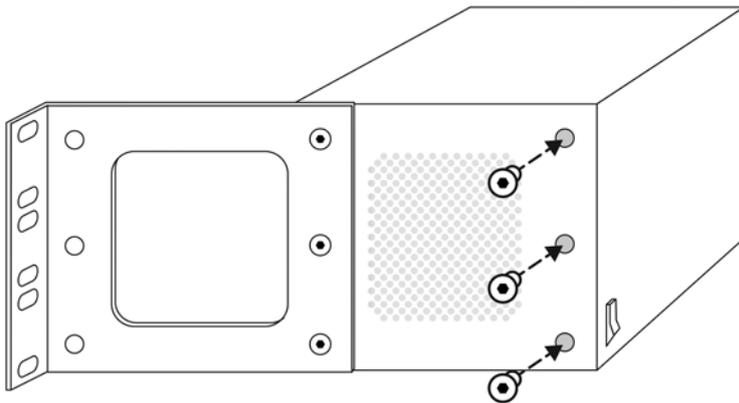

For a reversed configuration, simply rotate the ears 180° and re-attach the screws.

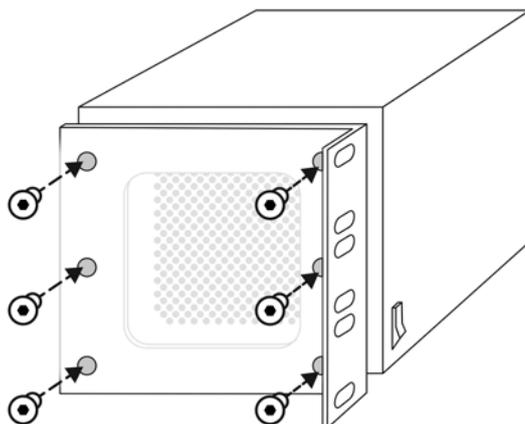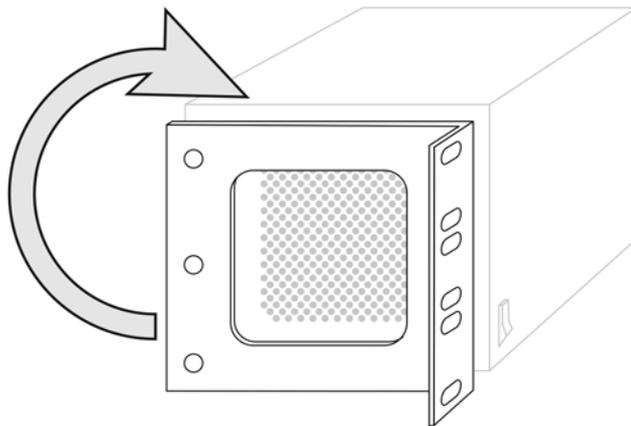

3. Mount your reconfigured NSB 32.16 stage box in the rack of your choice. You're done!

5. Technical Information

5.1 Specifications

Microphone Preamplifier	
Input Type	XLR Female, balanced
Frequency Response to Main Output (at unity gain)	20-20 kHz, ± 0.5 dBu
Input Impedance	1 k Ω
THD to Main Output	<0.005%, +4 dBu, 20-20 kHz, unity gain, unwtD
S/N Ratio to Main Output (Ref = +4 dB, 20 kHz BW, unity gain, A-wtd)	94 dB
Common Mode Rejection Ratio (1 kHz at unity gain)	65 dB
Gain Control Range (± 1 dB)	0 dB to +60 dB
Maximum Input Level (unity gain)	=+12 dBu
Phantom Power (± 2 VDC)	48 VDC, switchable per channel
Line Inputs	
Type	$\frac{1}{4}$ " TRS Female, balanced
Frequency Response to Main Output (at unity gain)	20-20 kHz, ± 0.5 dBu
Input Impedance	10 k Ω
THD to Main Output	<0.005%, +4 dBu, 20-20 kHz, unity gain, unwtD
S/N Ratio to Main Output (Ref = +4 dB, 20 kHz BW, unity gain, A-wtd)	94 dB
Maximum Input Level	=+18 dBu
XLR Outputs	
Type	XLR Male, balanced

Maximum Output Level	=+24 dBu, ±0.5 dBu
Output Impedance	100Ω
AES Outputs (NSB 32.16 only)	
Connectivity	XLR Male, balanced
Type	AES 3
Digital Audio	
ADC Dynamic Range	115 dB (A-wtd, 48 kHz)
DAC Dynamic Range	115 dB (A-wtd, 48 kHz)
AVB Audio Network Ports	Locking XLR Ethernet
Sampling Rate	48 kHz
Power	
Connector	Locking IEC
Input-Voltage Range	90 to 230 VAC (±10%)
Physical	
Height	NSB 8.8: 5.2" (132 mm)
	NSB 16.8: 7" (178 mm)
	NSB 32.16: 5.25" (133 mm)
Width	NSB 8.8: 16.7" (424 mm)
	NSB 16.8: 16.7" (424 mm)
	NSB 32.16: 19" (483 mm)
Depth	NSB 8.8: 4.5" (114 mm)
	NSB 16.8: 4.5" (114 mm)
	NSB 32.16: 5.5" (140 mm)

Weight	NSB 8.8: 5.4 lbs. (2.4 kg)
	NSB 16.8: 6.2 lbs. (2.8 kg)
	NSB 32.16: 10.2 lbs (4.6 kg)

6. Legal

Outside of the approved use listed herein, no part of this document may be reproduced, distributed, or transmitted in any form or by any means and is protected by U.S. and International copyright laws. This manual may be printed for personal use only. It may not be sold, transmitted, or reproduced on websites or any other media, or used for any commercial purpose.

Unless otherwise indicated below, the trademarks, service marks, and logos contained herein (the "Marks") are owned or controlled by PreSonus Audio Electronics, Inc., or are used herein under license.

©2022 PreSonus Audio Electronics, Inc. All Rights Reserved.

AudioBox USB, Capture, CoActual, EarMix, Eris, FaderPort, FireStudio, MixVerb, Notion, PreSonus, PreSonus AudioBox, QMix, RedLightDist, SampleOne, Sceptre, StudioLive, Temblor, Tricomp, WorxAudio, Revelator and the Wave Logo are trademarks of PreSonus Audio Electronics, Inc., and/or its affiliates, some of which are registered in the US and other countries.

Mac, macOS, iOS, and iPadOS are registered trademarks of Apple, Inc., in the U.S. and other countries.

Windows is a registered trademark of Microsoft, Inc., in the U.S. and other countries.

Other product names mentioned herein may be trademarks of their respective companies.

All specifications subject to change without notice... except the recipe, which is a classic.

7. Dinner is Served!

Added bonus: PreSonus' previously Top Secret recipe for...

Andouille & German Red Cabbage Po-Boys

Ingredients:

- 1 small Onion
- 3 Tbsp. fresh Ginger
- 1 small head Red Cabbage
- 1 tsp Salt
- 3 Tbsp. Honey
- ¼ cup Red Vinegar
- 12 oz Andouille or Bratwurst Sausage sliced lengthwise
- ¼ lb. Muenster Cheese
- Creole or German Mustard to taste
- 1 loaf French Bread

Cooking Instructions:

- Heat 2 tablespoon vegetable oil in large skillet. Add onions and ginger, then cook them for about 3 minutes until onions begin to wilt. Add cabbage, vinegar, and honey, and then cook for about 5 minutes. Add salt to taste and set aside.
- Heat oil in a skillet till hot. Add sausage cut side down till nice and brown, turn and cook for about 5 minutes till thoroughly cooked.
- Slice bread lengthwise, lay a bed of cabbage, then sausage, and cheese on top. Toast under the broiler or in a hot oven till cheese is melted and bread is crisp.
- Spread mustard on bread. Sandwich can then be cut into 2-3 pieces and shared (or not if you're really hungry).

BONUS: Extra cabbage can be used as a condiment with meat, eggs, sandwiches, etc.

NSB-Series Stagebox

AVB Remote I/O

Owner's Manual

